



FMA[®]

FAST SF NEW GENERATION HEAD PROTECTION SYSTEM HELMET

FAST SF 2.0战术头盔说明书

www.fma.hk

外部环绕附件

Exterior loop accessory attachment

如何将魔术贴毛面粘贴到头盔外部，并将设备固定在头外侧的魔术贴上，请如图粘贴。

How to attach the Velcro surface to the outside of the helmet and fix the device to the Velcro on the outside of the head. Please attach it as shown in the picture.



左面
Left

环绕附件侧面视图

Side view of wrap-around attachment



右面
Right



环绕附件后部视图

Surround Accessory Rear View



环绕附件顶部视图


Wrap-around attachment top view

① 请小心粘贴魔术贴

Please be careful when attaching the Velcro

温馨提示：魔术贴粘贴后粘性较强，若强行撕下可能导致残胶残留在头盔上，为确保使用效果，请在首次粘贴时仔细对准位置，避免后续调整。

Warm reminder: The Velcro has strong stickiness after being pasted. If it is forcibly torn off, residual glue may remain on the helmet. To ensure the use effect, please carefully align the position when pasting for the first time to avoid subsequent adjustments.

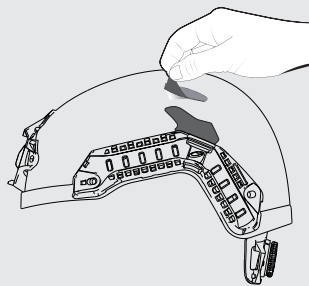

② 准备张贴 ready to post

请仔细阅读安装说明，仔细对齐魔术贴确保正确位置，在移除背部贴纸之前，检查适配所有的魔术贴片，魔术贴上的胶是强力胶，一旦粘贴上，就不容易撕下。


Please read the installation instructions carefully and precisely align the Velcro strips to ensure correct positioning. Check the fit of all Velcro pieces before removing the backing paper; the adhesive is very strong, so once attached, it is difficult to remove.



布线电缆 Route the cable

如图所示，将电缆穿过ARC导轨的底部。该导轨背面有两种方式可从导轨中引出电缆(上部和下部)。


As shown in the figure, route the cable through the bottom of the ARC rail. There are two exit points for the cable on the back of the rail (upper and lower).

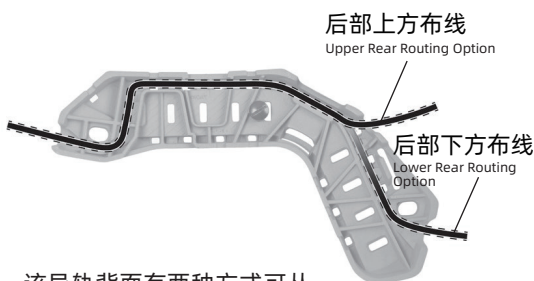



FAST SF战术头盔装配示意图

FAST SF Tactical Helmet Assembly Diagram

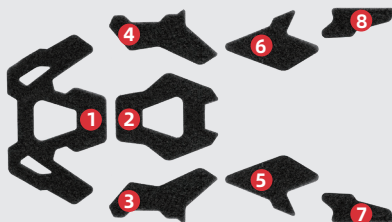

头盔魔术贴安装位置
Helmet Velcro Installation Location



内置泡沫垫和记忆海绵
Built-in foam padding and memory foam

支持两种佩戴方式，可舒适地置于下巴下方或下巴上方。请根据您的头型，参照以下说明调整下巴托的位置，以确保贴合。


It supports two wearing styles, allowing it to rest comfortably either below or above the chin. Please adjust the position of the chin rest according to your head shape and the instructions below to ensure a proper fit.



佩戴下巴下方
Worn under the chin



佩戴下巴上方
Worn over the chin

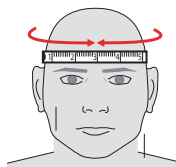


周长

circumference

使用卷尺测量周长：
Use a tape measure to measure the perimeter:

眉毛和耳朵上方1/2英寸处。
使用尺子测量长度。

1/2 inch above the eyebrows and ears.
Use a ruler to measure the length.

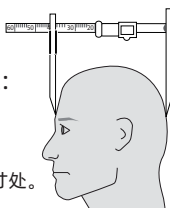


长度

length

使用卡尺测量长度和宽度：
Measure length and width with calipers:

测量最大长度/宽度，手指宽度约为眉毛上方或耳朵上方的1/2英寸

Measure the maximum length/width, finger width is about 1/2 inch above the eyebrows or above the ears

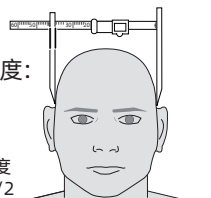

宽度

width